

# DROPZONE<sup>®</sup>

## SUSPENSION

### Installation Instructions: Please READ before installing

#### *Adjustable coilovers*


This kit should include the following items:

- 2 Rear coil over springs
- 2 Front coil over springs
- 4 Coilovers sleeves
- 2 Adjustment wrenches
- 12 Hex head set screws
- 4 Billet aluminum alignment caps

*Some kits might include some additional parts depending on vehicle make, model and year*

#### **Tools recommended for installation:**

- Socket wrench with 10, 12, 14 and 17mm sockets
- Spring compressor, hex key wrenches
- Hydraulic jack and jack stands

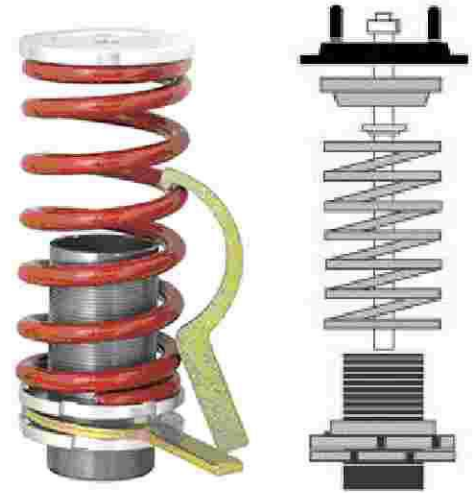

#### **Installation Procedures**

1. Raise the vehicle making sure it is secure on jack stands
2. Remove the wheels
3. Remove shock assembly from chassis
4. Using a spring compressor, carefully remove strut
5. Remove dust caps and bump stops from strut assembly and do not re-install
6. Install sleeves onto struts with the unthreaded part at the bottom
7. Install perches onto the sleeves with the flat perch at the bottom; the second perch (the one with the lip) is installed with the lip facing up.
8. Install correct sized shock spacers into the coilover sleeves. OR, install hex set screws into sleeve, tighten symmetrically and snugly.
9. Install the correct spring onto the strut. In the part #, the higher number is the front springs and the lower number the rear.
10. Install the OEM struts washer onto each strut.
11. Install aluminum springs alignment cap onto top of strut washer. Center hole may require drilling to fit the strut correctly.
12. Re assemble the remainder of the shock assembly & re-install onto chassis.
13. Pre-set the perches to the desired height, lock perches by tightening against each other with the adjustment wrenches.
14. Repeat steps #1 and #13 until desired height is desired.

#### **Product Disclaimer**

*Vehicles modified by the addition of competition parts may not meet legal requirements for use on public roads. It is consumer's responsibility to comply with Federal, State, Provincial and local laws prior to installation. Use or installation of Dynamic Auto Design competition products may affect your insurance and vehicle's warranty coverage. It is the customer's sole responsibility to comply with laws pertaining to competition products on public roads.*

Dropzone has the right to void any coilover warranty installed with factory shocks.

13100 SW 85 Ave Road, Miami, FL 33156  
Phone: (305) 256-8889 / 1-888-800-0051  
Visit us on the web at [www.dropzonesuspension.com](http://www.dropzonesuspension.com)

